

AutoMaker:Jaguar  
Version:V5.00

**NOTES:**

- ✓ This function is supported.
  - This function is not supported.
  - ※ This function may be supported, which depends on the actual condition of the vehicle.
  - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

VehicleType	Model Year	Engine Type	Capacity	System	Read Codes	Erase Codes	Live Data
X100	2000			ABS	✓	✓	✓
X100	2000			ECM	✓	✓	✓
X100	2000			IPK	✓	✓	✓
X100	2000			TCM	✓	✓	✓
X100	2000			ACC	✓	✓	✓
X100	2000			SBC	✓	✓	✓
X100	2000			DSM	✓	✓	✓
X100	2000			PSM	✓	✓	✓
X100	2000			SLM	✓	✓	✓
X100	2000			PDM	✓	✓	✓
X100	2000			DDM	✓	✓	✓
X100	2000			BPM	✓	✓	✓
X100	2000			CCM	✓	✓	✓
X100	2000			ADS	✓	✓	✓
X100	2000			ACM	✓	✓	✓
X100	2000			KTM	✓	✓	✓
X100	2001			ABS	✓	✓	✓
X100	2001			ECM	✓	✓	✓
X100	2001			IPK	✓	✓	✓
X100	2001			TCM	✓	✓	✓
X100	2001			ACC	✓	✓	✓
X100	2001			SBC	✓	✓	✓
X100	2001			DSM	✓	✓	✓
X100	2001			PSM	✓	✓	✓
X100	2001			SLM	✓	✓	✓
X100	2001			PDM	✓	✓	✓
X100	2001			DDM	✓	✓	✓
X100	2001			BPM	✓	✓	✓
X100	2001			DHM	✓	✓	✓
X100	2001			PHM	✓	✓	✓
X100	2001			CCM	✓	✓	✓
X100	2001			ARM	✓	✓	✓
X100	2001			KTM	✓	✓	✓
X100	2001			ADS	✓	✓	✓
X100	1997			ABS	✓	✓	✓
X100	1997			ECM	✓	✓	✓
X100	1997			IPK	✓	✓	✓
X100	1997			TCM	✓	✓	✓
X100	1997			DSM	✓	✓	✓
X100	1997			PSM	✓	✓	✓
X100	1997			SLM	✓	✓	✓
X100	1997			PDM	✓	✓	✓
X100	1997			DDM	✓	✓	✓
X100	1997			BPM	✓	✓	✓
X100	1997			ACM	✓	✓	✓
X100	1997			CCM	✓	✓	✓
X100	1997			ADS	✓	✓	✓
X100	1997			KTM	✓	✓	✓
X100	1997 25			ABS	✓	✓	✓
X100	1997 25			ECM	✓	✓	✓
X100	1997 25			IPK	✓	✓	✓
X100	1997 25			TCM	✓	✓	✓
X100	1997 25			DSM	✓	✓	✓
X100	1997 25			PSM	✓	✓	✓
X100	1997 25			SLM	✓	✓	✓
X100	1997 25			PDM	✓	✓	✓
X100	1997 25			DDM	✓	✓	✓
X100	1997 25			BPM	✓	✓	✓
X100	1997 25			ACM	✓	✓	✓
X100	1997 25			CCM	✓	✓	✓
X100	1997 25			ADS	✓	✓	✓
X100	1997 25			KTM	✓	✓	✓
X100	1998			ABS	✓	✓	✓
X100	1998			ECM	✓	✓	✓
X100	1998			IPK	✓	✓	✓
X100	1998			TCM	✓	✓	✓
X100	1998			DSM	✓	✓	✓
X100	1998			PSM	✓	✓	✓
X100	1998			SLM	✓	✓	✓
X100	1998			PDM	✓	✓	✓
X100	1998			DDM	✓	✓	✓
X100	1998			BPM	✓	✓	✓
X100	1998			ACM	✓	✓	✓
X100	1998			CCM	✓	✓	✓
X100	1998			ADS	✓	✓	✓
X100	1998			KTM	✓	✓	✓
X100	1998 75			ABS	✓	✓	✓
X100	1998 75			ECM	✓	✓	✓

X100	1998	75		IPK	✓	✓	✓
X100	1998	75		TCM	✓	✓	✓
X100	1998	75		DSM	✓	✓	✓
X100	1998	75		PSM	✓	✓	✓
X100	1998	75		SLM	✓	✓	✓
X100	1998	75		PDM	✓	✓	✓
X100	1998	75		DDM	✓	✓	✓
X100	1998	75		BPM	✓	✓	✓
X100	1998	75		ACM	✓	✓	✓
X100	1998	75		CCM	✓	✓	✓
X100	1998	75		ADS	✓	✓	✓
X100	1998	75		KTM	✓	✓	✓
X100	1999			ABS	✓	✓	✓
X100	1999			ECM	✓	✓	✓
X100	1999			IPK	✓	✓	✓
X100	1999			TCM	✓	✓	✓
X100	1999			DSM	✓	✓	✓
X100	1999			PSM	✓	✓	✓
X100	1999			SLM	✓	✓	✓
X100	1999			PDM	✓	✓	✓
X100	1999			DDM	✓	✓	✓
X100	1999			BPM	✓	✓	✓
X100	1999			ACM	✓	✓	✓
X100	1999			CCM	✓	✓	✓
X100	1999			ADS	✓	✓	✓
X100	1999			KTM	✓	✓	✓
X103	2003			ABS	✓	✓	✓
X103	2003			ACC	✓	✓	✓
X103	2003			ADHLS_L	✓	✓	✓
X103	2003			ADHLS_R	✓	✓	✓
X103	2003			ADRC	✓	✓	✓
X103	2003			ARM	✓	✓	✓
X103	2003			ATC	✓	✓	✓
X103	2003			BPM	✓	✓	✓
X103	2003			DDM	✓	✓	✓
X103	2003			DHM	✓	✓	✓
X103	2003			DSM	✓	✓	✓
X103	2003			ECM	✓	✓	✓
X103	2003			IP	✓	✓	✓
X103	2003			PAM	✓	✓	✓
X103	2003			PDM	✓	✓	✓
X103	2003			PHM	✓	✓	✓
X103	2003			PSM	✓	✓	✓
X103	2003			SLM	✓	✓	✓
X103	2003			TCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		ABS	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		CCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		ADCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		HCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		PCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		VIM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		PRM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		IPC	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		ICS	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		RCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		TCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		DDM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		DSM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		FLR	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		FSJB	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		FTCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		ICM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		ICP	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		KVM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		PAM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		PDM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		PSM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		HVAC	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		RSJB	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		TPM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		FCDIM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		ACM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		AAM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		NCM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		SRM	✓	✓	✓
X150	2006.5-2009	Normal aspirated V8		BPM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		ABS	✓	✓	✓
X150	2006.5-2009	Supercharged V8		CCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		ADCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		HCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		PCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		VIM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		PRM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		IPC	✓	✓	✓
X150	2006.5-2009	Supercharged V8		ICS	✓	✓	✓
X150	2006.5-2009	Supercharged V8		RCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		TCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		DDM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		DSM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		FSJB	✓	✓	✓
X150	2006.5-2009	Supercharged V8		FTCM	✓	✓	✓
X150	2006.5-2009	Supercharged V8		ICM	✓	✓	✓

X150	2006. 5-2009.	Supercharged V8		ICP	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		KVM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		PAM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		PDM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		PSM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		HVAC	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		RS.TB	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		TPM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		FCDIM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		ACM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		AAM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		NCM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		SRM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		BPM	✓	✓	✓
X150	2006. 5-2009.	Supercharged V8		FLR	✓	✓	✓
X150	2010	Normal aspirated V8		AAM	✓	✓	✓
X150	2010	Normal aspirated V8		ABS	✓	✓	✓
X150	2010	Normal aspirated V8		ACM	✓	✓	✓
X150	2010	Normal aspirated V8		ADCM	✓	✓	✓
X150	2010	Normal aspirated V8		APIM	✓	✓	✓
X150	2010	Normal aspirated V8		BCM	✓	✓	✓
X150	2010	Normal aspirated V8		CCM	✓	✓	✓
X150	2010	Normal aspirated V8		DABM	✓	✓	✓
X150	2010	Normal aspirated V8		DACMC	✓	✓	✓
X150	2010	Normal aspirated V8		DCSM	✓	✓	✓
X150	2010	Normal aspirated V8		DDM	✓	✓	✓
X150	2010	Normal aspirated V8		DSM	✓	✓	✓
X150	2010	Normal aspirated V8		FCDIM	✓	✓	✓
X150	2010	Normal aspirated V8		FLR	✓	✓	✓
X150	2010	Normal aspirated V8		FS.TB	✓	✓	✓
X150	2010	Normal aspirated V8		FTCM	✓	✓	✓
X150	2010	Normal aspirated V8		GSM	✓	✓	✓
X150	2010	Normal aspirated V8		HCM	✓	✓	✓
X150	2010	Normal aspirated V8		HVAC	✓	✓	✓
X150	2010	Normal aspirated V8		ICM	✓	✓	✓
X150	2010	Normal aspirated V8		ICP	✓	✓	✓
X150	2010	Normal aspirated V8		IGCS	✓	✓	✓
X150	2010	Normal aspirated V8		IPC	✓	✓	✓
X150	2010	Normal aspirated V8		KVM	✓	✓	✓
X150	2010	Normal aspirated V8		NCM	✓	✓	✓
X150	2010	Normal aspirated V8		OCS	✓	✓	✓
X150	2010	Normal aspirated V8		PAM	✓	✓	✓
X150	2010	Normal aspirated V8		PBM	✓	✓	✓
X150	2010	Normal aspirated V8		PCM	✓	✓	✓
X150	2010	Normal aspirated V8		PDM	✓	✓	✓
X150	2010	Normal aspirated V8		PSM	✓	✓	✓
X150	2010	Normal aspirated V8		RCM	✓	✓	✓
X150	2010	Normal aspirated V8		RDCM	✓	✓	✓
X150	2010	Normal aspirated V8		RS.TB	✓	✓	✓
X150	2010	Normal aspirated V8		SRM	✓	✓	✓
X150	2010	Normal aspirated V8		TCM	✓	✓	✓
X150	2010	Normal aspirated V8		TEL	✓	✓	✓
X150	2010	Normal aspirated V8		TPM	✓	✓	✓
X150	2010	Normal aspirated V8		VIM	✓	✓	✓
X150	2010	Supercharged V8		AAM	✓	✓	✓
X150	2010	Supercharged V8		ABS	✓	✓	✓
X150	2010	Supercharged V8		ACM	✓	✓	✓
X150	2010	Supercharged V8		ADCM	✓	✓	✓
X150	2010	Supercharged V8		APIM	✓	✓	✓
X150	2010	Supercharged V8		BCM	✓	✓	✓
X150	2010	Supercharged V8		CCM	✓	✓	✓
X150	2010	Supercharged V8		DABM	✓	✓	✓
X150	2010	Supercharged V8		DACMC	✓	✓	✓
X150	2010	Supercharged V8		DCSM	✓	✓	✓
X150	2010	Supercharged V8		DDM	✓	✓	✓
X150	2010	Supercharged V8		DSM	✓	✓	✓
X150	2010	Supercharged V8		FCDIM	✓	✓	✓
X150	2010	Supercharged V8		FLR	✓	✓	✓
X150	2010	Supercharged V8		FS.TB	✓	✓	✓
X150	2010	Supercharged V8		FTCM	✓	✓	✓
X150	2010	Supercharged V8		GSM	✓	✓	✓
X150	2010	Supercharged V8		HCM	✓	✓	✓
X150	2010	Supercharged V8		HVAC	✓	✓	✓
X150	2010	Supercharged V8		ICM	✓	✓	✓
X150	2010	Supercharged V8		ICP	✓	✓	✓
X150	2010	Supercharged V8		IGCS	✓	✓	✓
X150	2010	Supercharged V8		IPC	✓	✓	✓
X150	2010	Supercharged V8		KVM	✓	✓	✓
X150	2010	Supercharged V8		NCM	✓	✓	✓
X150	2010	Supercharged V8		OCS	✓	✓	✓
X150	2010	Supercharged V8		PAM	✓	✓	✓
X150	2010	Supercharged V8		PBM	✓	✓	✓
X150	2010	Supercharged V8		PCM	✓	✓	✓
X150	2010	Supercharged V8		PDM	✓	✓	✓
X150	2010	Supercharged V8		PSM	✓	✓	✓
X150	2010	Supercharged V8		RCM	✓	✓	✓
X150	2010	Supercharged V8		RDCM	✓	✓	✓
X150	2010	Supercharged V8		RS.TB	✓	✓	✓
X150	2010	Supercharged V8		SRM	✓	✓	✓

X150	2010	Supercharged V8		TCM	✓	✓	✓
X150	2010	Supercharged V8		TEL	✓	✓	✓
X150	2010	Supercharged V8		TPM	✓	✓	✓
X150	2010	Supercharged V8		VIM	✓	✓	✓
X152	2014	V8SC		ABS	✓	✓	✓
X152	2014	V8SC		ATCM	✓	✓	✓
X152	2014	V8SC		BCM	✓	✓	✓
X152	2014	V8SC		CHCM	✓	✓	✓
X152	2014	V8SC		FTCM	✓	✓	✓
X152	2014	V8SC		FTCMB	✓	✓	✓
X152	2014	V8SC		GSM	✓	✓	✓
X152	2014	V8SC		GWM	✓	✓	✓
X152	2014	V8SC		HCM	✓	✓	✓
X152	2014	V8SC		IPC	✓	✓	✓
X152	2014	V8SC		OCS	✓	✓	✓
X152	2014	V8SC		PAM	✓	✓	✓
X152	2014	V8SC		PBM	✓	✓	✓
X152	2014	V8SC		PCM	✓	✓	✓
X152	2014	V8SC		PCM	✓	✓	✓
X152	2014	V8SC		RCM	✓	✓	✓
X152	2014	V8SC		RDCM	✓	✓	✓
X152	2014	V8SC		TCM	✓	✓	✓
X152	2014	V8SC		VIM	✓	✓	✓
X152	2014	V8SC		DDM	✓	✓	✓
X152	2014	V8SC		DSM	✓	✓	✓
X152	2014	V8SC		FCDIM	✓	✓	✓
X152	2014	V8SC		FCIM	✓	✓	✓
X152	2014	V8SC		HCMB	✓	✓	✓
X152	2014	V8SC		HVAC	✓	✓	✓
X152	2014	V8SC		JPMB	✓	✓	✓
X152	2014	V8SC		REA	✓	✓	✓
X152	2014	V8SC		PDM	✓	✓	✓
X152	2014	V8SC		PSM	✓	✓	✓
X152	2014	V8SC		SODL	✓	✓	✓
X152	2014	V8SC		SODR	✓	✓	✓
X152	2014	V8SC		AAM	✓	✓	✓
X152	2014	V8SC		ACM	✓	✓	✓
X152	2014	V8SC		DABM	✓	✓	✓
X152	2014	V8SC		NCM	✓	✓	✓
X152	2014	V8SC		SRM	✓	✓	✓
X152	2014	V8SC		TYM	✓	✓	✓
X152	2014	V6SC		ABS	✓	✓	✓
X152	2014	V6SC		ATCM	✓	✓	✓
X152	2014	V6SC		BCM	✓	✓	✓
X152	2014	V6SC		CHCM	✓	✓	✓
X152	2014	V6SC		FTCM	✓	✓	✓
X152	2014	V6SC		FTCMB	✓	✓	✓
X152	2014	V6SC		GSM	✓	✓	✓
X152	2014	V6SC		GWM	✓	✓	✓
X152	2014	V6SC		HCM	✓	✓	✓
X152	2014	V6SC		IPC	✓	✓	✓
X152	2014	V6SC		OCS	✓	✓	✓
X152	2014	V6SC		PAM	✓	✓	✓
X152	2014	V6SC		PBM	✓	✓	✓
X152	2014	V6SC		PCM	✓	✓	✓
X152	2014	V6SC		PCM	✓	✓	✓
X152	2014	V6SC		RCM	✓	✓	✓
X152	2014	V6SC		RDCM	✓	✓	✓
X152	2014	V6SC		TCM	✓	✓	✓
X152	2014	V6SC		VIM	✓	✓	✓
X152	2014	V6SC		DDM	✓	✓	✓
X152	2014	V6SC		DSM	✓	✓	✓
X152	2014	V6SC		FCDIM	✓	✓	✓
X152	2014	V6SC		FCIM	✓	✓	✓
X152	2014	V6SC		HCMB	✓	✓	✓
X152	2014	V6SC		HVAC	✓	✓	✓
X152	2014	V6SC		JPMB	✓	✓	✓
X152	2014	V6SC		REA	✓	✓	✓
X152	2014	V6SC		PDM	✓	✓	✓
X152	2014	V6SC		PSM	✓	✓	✓
X152	2014	V6SC		SODL	✓	✓	✓
X152	2014	V6SC		SODR	✓	✓	✓
X152	2014	V6SC		AAM	✓	✓	✓
X152	2014	V6SC		ACM	✓	✓	✓
X152	2014	V6SC		DABM	✓	✓	✓
X152	2014	V6SC		NCM	✓	✓	✓
X152	2014	V6SC		SRM	✓	✓	✓
X152	2014	V6SC		TYM	✓	✓	✓
X200	1999 25			PAM	✓	✓	✓
X200	1999 25			RCM	✓	✓	✓
X200	1999 25			ABS	✓	✓	✓
X200	1999 25			ADS	✓	✓	✓
X200	1999 25			CCM	✓	✓	✓
X200	1999 25			CPM	✓	✓	✓
X200	1999 25			DDM	✓	✓	✓
X200	1999 25			DSM	✓	✓	✓
X200	1999 25			GEM	✓	✓	✓
X200	1999 25			JCE	✓	✓	✓
X200	1999 25			IPK	✓	✓	✓
X200	1999 25			MCC	✓	✓	✓
X200	1999 25			NAV	✓	✓	✓
X200	1999 25			PCM	✓	✓	✓
X200	1999 25			REM	✓	✓	✓
X200	1999 25			RES	✓	✓	✓
X200	1999 25			SCL	✓	✓	✓

X200	1999_25			TCU	✓	✓	✓
X200	1999_25			VAM	✓	✓	✓
X200	2000			PAM	✓	✓	✓
X200	2000			RCM	✓	✓	✓
X200	2000			ABS	✓	✓	✓
X200	2000			ADS	✓	✓	✓
X200	2000			CCM	✓	✓	✓
X200	2000			CPM	✓	✓	✓
X200	2000			DDM	✓	✓	✓
X200	2000			DSM	✓	✓	✓
X200	2000			GEM	✓	✓	✓
X200	2000			ICE	✓	✓	✓
X200	2000			IPK	✓	✓	✓
X200	2000			MCC	✓	✓	✓
X200	2000			NAV	✓	✓	✓
X200	2000			PCM	✓	✓	✓
X200	2000			REM	✓	✓	✓
X200	2000			RES	✓	✓	✓
X200	2000			SCL	✓	✓	✓
X200	2000			TCU	✓	✓	✓
X200	2000			VAM	✓	✓	✓
X200	2001			PAM	✓	✓	✓
X200	2001			RCM	✓	✓	✓
X200	2001			ABS	✓	✓	✓
X200	2001			ADS	✓	✓	✓
X200	2001			CCM	✓	✓	✓
X200	2001			CPM	✓	✓	✓
X200	2001			DDM	✓	✓	✓
X200	2001			DSM	✓	✓	✓
X200	2001			GEM	✓	✓	✓
X200	2001			ICE	✓	✓	✓
X200	2001			IPK	✓	✓	✓
X200	2001			MCC	✓	✓	✓
X200	2001			NAV	✓	✓	✓
X200	2001			PCM	✓	✓	✓
X200	2001			REM	✓	✓	✓
X200	2001			RES	✓	✓	✓
X200	2001			SCL	✓	✓	✓
X200	2001			TCU	✓	✓	✓
X200	2001			VAM	✓	✓	✓
X202	2002_5			ABS	✓	✓	✓
X202	2002_5			ACC	✓	✓	✓
X202	2002_5			ADHLS	✓	✓	✓
X202	2002_5			ADRC	✓	✓	✓
X202	2002_5			AMP	✓	✓	✓
X202	2002_5			ARM	✓	✓	✓
X202	2002_5			ATC	✓	✓	✓
X202	2002_5			CPM	✓	✓	✓
X202	2002_5			DDM	✓	✓	✓
X202	2002_5			DSM	✓	✓	✓
X202	2002_5			ECM	✓	✓	✓
X202	2002_5			EPB	✓	✓	✓
X202	2002_5			FETM	✓	✓	✓
X202	2002_5			GEM	✓	✓	✓
X202	2002_5			IP	✓	✓	✓
X202	2002_5			ISM	✓	✓	✓
X202	2002_5			NAV	✓	✓	✓
X202	2002_5			PAM	✓	✓	✓
X202	2002_5			REM	✓	✓	✓
X202	2002_5			SCLM	✓	✓	✓
X202	2002_5			TCM	✓	✓	✓
X202	2002_5			VACM	✓	✓	✓
X204	2004	AT61		ABS	✓	✓	✓
X204	2004	AT61		ACC	✓	✓	✓
X204	2004	AT61		ADHLS	✓	✓	✓
X204	2004	AT61		ADRC	✓	✓	✓
X204	2004	AT61		AMP	✓	✓	✓
X204	2004	AT61		ARM	✓	✓	✓
X204	2004	AT61		ATC	✓	✓	✓
X204	2004	AT61		CPM	✓	✓	✓
X204	2004	AT61		DDM	✓	✓	✓
X204	2004	AT61		DSM	✓	✓	✓
X204	2004	AT61		ECM	✓	✓	✓
X204	2004	AT61		FETM	✓	✓	✓
X204	2004	AT61		GEM	✓	✓	✓
X204	2004	AT61		IP	✓	✓	✓
X204	2004	AT61		ISM	✓	✓	✓
X204	2004	AT61		NAV	✓	✓	✓
X204	2004	AT61		PAM	✓	✓	✓
X204	2004	AT61		PBM	✓	✓	✓
X204	2004	AT61		REM	✓	✓	✓
X204	2004	AT61		SCLM	✓	✓	✓
X204	2004	AT61		TCM	✓	✓	✓
X204	2004	AT61		VACM	✓	✓	✓
X204	2004	V6DIESEL		ABS	✓	✓	✓
X204	2004	V6DIESEL		ACC	✓	✓	✓
X204	2004	V6DIESEL		ADHLS	✓	✓	✓
X204	2004	V6DIESEL		ADRC	✓	✓	✓
X204	2004	V6DIESEL		AMP	✓	✓	✓
X204	2004	V6DIESEL		ARM	✓	✓	✓
X204	2004	V6DIESEL		ATC	✓	✓	✓
X204	2004	V6DIESEL		CPM	✓	✓	✓
X204	2004	V6DIESEL		DDM	✓	✓	✓
X204	2004	V6DIESEL		DSM	✓	✓	✓
X204	2004	V6DIESEL		FETM	✓	✓	✓

X204	2004	V6DIESEL	GEM	✓	✓	✓
X204	2004	V6DIESEL	IP	✓	✓	✓
X204	2004	V6DIESEL	ISM	✓	✓	✓
X204	2004	V6DIESEL	NAV	✓	✓	✓
X204	2004	V6DIESEL	PAM	✓	✓	✓
X204	2004	V6DIESEL	PBM	✓	✓	✓
X204	2004	V6DIESEL	REM	✓	✓	✓
X204	2004	V6DIESEL	SCLM	✓	✓	✓
X204	2004	V6DIESEL	TCM	✓	✓	✓
X204	2004	V6DIESEL	VACM	✓	✓	✓
X204	2004	V6DIESEL	AHCM	✓	✓	✓
X204	2004	V6DIESEL	PCM	✓	✓	✓
X206	2006	V6DIESEL	AHCM	✓	✓	✓
X206	2006	V6DIESEL	ABS	✓	✓	✓
X206	2006	V6DIESEL	ACC	✓	✓	✓
X206	2006	V6DIESEL	ADHLS	✓	✓	✓
X206	2006	V6DIESEL	ADRC	✓	✓	✓
X206	2006	V6DIESEL	AMP	✓	✓	✓
X206	2006	V6DIESEL	ARM	✓	✓	✓
X206	2006	V6DIESEL	ATC	✓	✓	✓
X206	2006	V6DIESEL	CPM	✓	✓	✓
X206	2006	V6DIESEL	DDM	✓	✓	✓
X206	2006	V6DIESEL	DSM	✓	✓	✓
X206	2006	V6DIESEL	FETM	✓	✓	✓
X206	2006	V6DIESEL	GEM	✓	✓	✓
X206	2006	V6DIESEL	IP	✓	✓	✓
X206	2006	V6DIESEL	ISM	✓	✓	✓
X206	2006	V6DIESEL	NAV	✓	✓	✓
X206	2006	V6DIESEL	PAM	✓	✓	✓
X206	2006	V6DIESEL	PBM	✓	✓	✓
X206	2006	V6DIESEL	PCM	✓	✓	✓
X206	2006	V6DIESEL	REM	✓	✓	✓
X206	2006	V6DIESEL	SCLM	✓	✓	✓
X206	2006	V6DIESEL	TCM	✓	✓	✓
X206	2006	V6DIESEL	TPM	✓	✓	✓
X206	2006	V6DIESEL	VACM	✓	✓	✓
X206	2006	V6NA	ABS	✓	✓	✓
X206	2006	V6NA	ACC	✓	✓	✓
X206	2006	V6NA	ADHLS	✓	✓	✓
X206	2006	V6NA	ADRC	✓	✓	✓
X206	2006	V6NA	AMP	✓	✓	✓
X206	2006	V6NA	ARM	✓	✓	✓
X206	2006	V6NA	ATC	✓	✓	✓
X206	2006	V6NA	CPM	✓	✓	✓
X206	2006	V6NA	DDM	✓	✓	✓
X206	2006	V6NA	DSM	✓	✓	✓
X206	2006	V6NA	FETM	✓	✓	✓
X206	2006	V6NA	GEM	✓	✓	✓
X206	2006	V6NA	IP	✓	✓	✓
X206	2006	V6NA	ISM	✓	✓	✓
X206	2006	V6NA	NAV	✓	✓	✓
X206	2006	V6NA	PAM	✓	✓	✓
X206	2006	V6NA	PBM	✓	✓	✓
X206	2006	V6NA	PCM	✓	✓	✓
X206	2006	V6NA	REM	✓	✓	✓
X206	2006	V6NA	SCLM	✓	✓	✓
X206	2006	V6NA	TCM	✓	✓	✓
X206	2006	V6NA	TPM	✓	✓	✓
X206	2006	V6NA	VACM	✓	✓	✓
X206	2006	V8SC	ABS	✓	✓	✓
X206	2006	V8SC	ACC	✓	✓	✓
X206	2006	V8SC	ADHLS	✓	✓	✓
X206	2006	V8SC	ADRC	✓	✓	✓
X206	2006	V8SC	AMP	✓	✓	✓
X206	2006	V8SC	ARM	✓	✓	✓
X206	2006	V8SC	ATC	✓	✓	✓
X206	2006	V8SC	CPM	✓	✓	✓
X206	2006	V8SC	DDM	✓	✓	✓
X206	2006	V8SC	DSM	✓	✓	✓
X206	2006	V8SC	FETM	✓	✓	✓
X206	2006	V8SC	GEM	✓	✓	✓
X206	2006	V8SC	IP	✓	✓	✓
X206	2006	V8SC	ISM	✓	✓	✓
X206	2006	V8SC	NAV	✓	✓	✓
X206	2006	V8SC	PAM	✓	✓	✓
X206	2006	V8SC	PBM	✓	✓	✓
X206	2006	V8SC	PCM	✓	✓	✓
X206	2006	V8SC	REM	✓	✓	✓
X206	2006	V8SC	SCLM	✓	✓	✓
X206	2006	V8SC	TCM	✓	✓	✓
X206	2006	V8SC	TPM	✓	✓	✓
X206	2006	V8SC	VACM	✓	✓	✓
X206	2006	V8NA	ABS	✓	✓	✓
X206	2006	V8NA	ACC	✓	✓	✓
X206	2006	V8NA	ADHLS	✓	✓	✓
X206	2006	V8NA	ADRC	✓	✓	✓
X206	2006	V8NA	AMP	✓	✓	✓
X206	2006	V8NA	ARM	✓	✓	✓
X206	2006	V8NA	ATC	✓	✓	✓
X206	2006	V8NA	CPM	✓	✓	✓
X206	2006	V8NA	DDM	✓	✓	✓
X206	2006	V8NA	DSM	✓	✓	✓
X206	2006	V8NA	FETM	✓	✓	✓
X206	2006	V8NA	GEM	✓	✓	✓
X206	2006	V8NA	IP	✓	✓	✓

X206	2006	VSNA		ISM	✓	✓	✓
X206	2006	VSNA		NAV	✓	✓	✓
X206	2006	VSNA		PAM	✓	✓	✓
X206	2006	VSNA		PBM	✓	✓	✓
X206	2006	VSNA		PCM	✓	✓	✓
X206	2006	VSNA		RFM	✓	✓	✓
X206	2006	VSNA		SCLM	✓	✓	✓
X206	2006	VSNA		TCM	✓	✓	✓
X206	2006	VSNA		TPM	✓	✓	✓
X206	2006	VSNA		VACM	✓	✓	✓
X250	2013			ABS	✓	✓	✓
X250	2013			CCM	✓	✓	✓
X250	2013			CHCM	✓	✓	✓
X250	2013			GSM	✓	✓	✓
X250	2013			GWM	✓	✓	✓
X250	2013			HCM	✓	✓	✓
X250	2013			IPC	✓	✓	✓
X250	2013			OCS	✓	✓	✓
X250	2013			PBM	✓	✓	✓
X250	2013			PCM	✓	✓	✓
X250	2013			RCM	✓	✓	✓
X250	2013			RDCM	✓	✓	✓
X250	2013			SPMA	✓	✓	✓
X250	2013			SPMB	✓	✓	✓
X250	2013			SLMB	✓	✓	✓
X250	2013			TCM	✓	✓	✓
X250	2013			VTM	✓	✓	✓
X250	2013			BCM	✓	✓	✓
X250	2013			BCMB	✓	✓	✓
X250	2013			CAV	✓	✓	✓
X250	2013			DDM	✓	✓	✓
X250	2013			DSM	✓	✓	✓
X250	2013			FCDIM	✓	✓	✓
X250	2013			FCIMB	✓	✓	✓
X250	2013			HCMB	✓	✓	✓
X250	2013			HVAC	✓	✓	✓
X250	2013			PAM	✓	✓	✓
X250	2013			PDM	✓	✓	✓
X250	2013			PSM	✓	✓	✓
X250	2013			REA	✓	✓	✓
X250	2013			RGTM	✓	✓	✓
X250	2013			SCME	✓	✓	✓
X250	2013			SODL	✓	✓	✓
X250	2013			SODR	✓	✓	✓
X250	2013			TPM	✓	✓	✓
X250	2013			AAAM	✓	✓	✓
X250	2013			ACM	✓	✓	✓
X250	2013			DABM	✓	✓	✓
X250	2013			NCM	✓	✓	✓
X250	2013			SRM	✓	✓	✓
X250	2013			TVM	✓	✓	✓
X250	2012			ABS	✓	✓	✓
X250	2012			CCM	✓	✓	✓
X250	2012			GSM	✓	✓	✓
X250	2012			GWM	✓	✓	✓
X250	2012			HCM	✓	✓	✓
X250	2012			IPC	✓	✓	✓
X250	2012			OCS	✓	✓	✓
X250	2012			PBM	✓	✓	✓
X250	2012			PCM	✓	✓	✓
X250	2012			RCM	✓	✓	✓
X250	2012			RDCM	✓	✓	✓
X250	2012			SPMA	✓	✓	✓
X250	2012			SPMB	✓	✓	✓
X250	2012			SLMB	✓	✓	✓
X250	2012			TCM	✓	✓	✓
X250	2012			VTM	✓	✓	✓
X250	2012			BCM	✓	✓	✓
X250	2012			BCMB	✓	✓	✓
X250	2012			DDM	✓	✓	✓
X250	2012			DSM	✓	✓	✓
X250	2012			FCDIM	✓	✓	✓
X250	2012			FCIMB	✓	✓	✓
X250	2012			HCMB	✓	✓	✓
X250	2012			HVAC	✓	✓	✓
X250	2012			PAM	✓	✓	✓
X250	2012			PDM	✓	✓	✓
X250	2012			PSM	✓	✓	✓
X250	2012			REA	✓	✓	✓
X250	2012			SCME	✓	✓	✓
X250	2012			SODL	✓	✓	✓
X250	2012			SODR	✓	✓	✓
X250	2012			TPM	✓	✓	✓
X250	2012			AAAM	✓	✓	✓
X250	2012			ACM	✓	✓	✓
X250	2012			DABM	✓	✓	✓
X250	2012			NCM	✓	✓	✓
X250	2012			SRM	✓	✓	✓
X250	2012			TVM	✓	✓	✓
X250	2010-2011	V6DIESEL		AAAM	✓	✓	✓
X250	2010-2011	V6DIESEL		ABS	✓	✓	✓
X250	2010-2011	V6DIESEL		ACM	✓	✓	✓
X250	2010-2011	V6DIESEL		ADCM	✓	✓	✓
X250	2010-2011	V6DIESEL		APIM	✓	✓	✓
X250	2010-2011	V6DIESEL		CCM	✓	✓	✓









X250	2008-2009	VSSC		DSM	✓	✓	✓
X250	2008-2009	VSSC		FCDIM	✓	✓	✓
X250	2008-2009	VSSC		FLR	✓	✓	✓
X250	2008-2009	VSSC		ES.TB	✓	✓	✓
X250	2008-2009	VSSC		GSM	✓	✓	✓
X250	2008-2009	VSSC		HCM	✓	✓	✓
X250	2008-2009	VSSC		HVAC	✓	✓	✓
X250	2008-2009	VSSC		ICM	✓	✓	✓
X250	2008-2009	VSSC		ICP	✓	✓	✓
X250	2008-2009	VSSC		ICS	✓	✓	✓
X250	2008-2009	VSSC		IPC	✓	✓	✓
X250	2008-2009	VSSC		KVM	✓	✓	✓
X250	2008-2009	VSSC		NCM	✓	✓	✓
X250	2008-2009	VSSC		OCS	✓	✓	✓
X250	2008-2009	VSSC		PAM	✓	✓	✓
X250	2008-2009	VSSC		PBM	✓	✓	✓
X250	2008-2009	VSSC		PCM	✓	✓	✓
X250	2008-2009	VSSC		PDM	✓	✓	✓
X250	2008-2009	VSSC		RCM	✓	✓	✓
X250	2008-2009	VSSC		RS.TB	✓	✓	✓
X250	2008-2009	VSSC		SODI	✓	✓	✓
X250	2008-2009	VSSC		SODR	✓	✓	✓
X250	2008-2009	VSSC		SRM	✓	✓	✓
X250	2008-2009	VSSC		TCM	✓	✓	✓
X250	2008-2009	VSSC		TEL	✓	✓	✓
X250	2008-2009	VSSC		TPM	✓	✓	✓
X250	2008-2009	VSSC		TYM	✓	✓	✓
X250	2008-2009	VSSC		VIM	✓	✓	✓
X250	2008-2009	V8NA		AAM	✓	✓	✓
X250	2008-2009	V8NA		ABS	✓	✓	✓
X250	2008-2009	V8NA		ACM	✓	✓	✓
X250	2008-2009	V8NA		ADCM	✓	✓	✓
X250	2008-2009	V8NA		APIM	✓	✓	✓
X250	2008-2009	V8NA		CCM	✓	✓	✓
X250	2008-2009	V8NA		DABM	✓	✓	✓
X250	2008-2009	V8NA		DSCM	✓	✓	✓
X250	2008-2009	V8NA		DDM	✓	✓	✓
X250	2008-2009	V8NA		DSM	✓	✓	✓
X250	2008-2009	V8NA		FCDIM	✓	✓	✓
X250	2008-2009	V8NA		FLR	✓	✓	✓
X250	2008-2009	V8NA		ES.TB	✓	✓	✓
X250	2008-2009	V8NA		GSM	✓	✓	✓
X250	2008-2009	V8NA		HCM	✓	✓	✓
X250	2008-2009	V8NA		HVAC	✓	✓	✓
X250	2008-2009	V8NA		ICM	✓	✓	✓
X250	2008-2009	V8NA		ICP	✓	✓	✓
X250	2008-2009	V8NA		ICS	✓	✓	✓
X250	2008-2009	V8NA		IPC	✓	✓	✓
X250	2008-2009	V8NA		KVM	✓	✓	✓
X250	2008-2009	V8NA		NCM	✓	✓	✓
X250	2008-2009	V8NA		OCS	✓	✓	✓
X250	2008-2009	V8NA		PAM	✓	✓	✓
X250	2008-2009	V8NA		PBM	✓	✓	✓
X250	2008-2009	V8NA		PCM	✓	✓	✓
X250	2008-2009	V8NA		PDM	✓	✓	✓
X250	2008-2009	V8NA		RCM	✓	✓	✓
X250	2008-2009	V8NA		RS.TB	✓	✓	✓
X250	2008-2009	V8NA		SODI	✓	✓	✓
X250	2008-2009	V8NA		SODR	✓	✓	✓
X250	2008-2009	V8NA		SRM	✓	✓	✓
X250	2008-2009	V8NA		TCM	✓	✓	✓
X250	2008-2009	V8NA		TEL	✓	✓	✓
X250	2008-2009	V8NA		TPM	✓	✓	✓
X250	2008-2009	V8NA		TYM	✓	✓	✓
X250	2008-2009	V8NA		VIM	✓	✓	✓
X300	2000			ABS	✓	✓	✓
X300	2000			ECM	✓	✓	✓
X300	2000			IPK	✓	✓	✓
X300	2000			TCM	✓	✓	✓
X300	2000			DSM	✓	✓	✓
X300	2000			PSM	✓	✓	✓
X300	2000			SLM	✓	✓	✓
X300	2000			PRDM	✓	✓	✓
X300	2000			PDM	✓	✓	✓
X300	2000			DRDM	✓	✓	✓
X300	2000			DDM	✓	✓	✓
X300	2000			ACM	✓	✓	✓
X300	2000			BPM	✓	✓	✓
X300	2000			CCM	✓	✓	✓
X300	2000			ADS	✓	✓	✓
X300	2000			KTM	✓	✓	✓
X300	1999			ABS	✓	✓	✓
X300	1999			ECM	✓	✓	✓
X300	1999			IPK	✓	✓	✓
X300	1999			TCM	✓	✓	✓
X300	1999			DSM	✓	✓	✓
X300	1999			PSM	✓	✓	✓
X300	1999			SLM	✓	✓	✓
X300	1999			PRDM	✓	✓	✓
X300	1999			PDM	✓	✓	✓
X300	1999			DRDM	✓	✓	✓
X300	1999			DDM	✓	✓	✓
X300	1999			BPM	✓	✓	✓
X300	1999			ACM	✓	✓	✓
X300	1999			CCM	✓	✓	✓

X300	1999			ADS	✓	✓	✓
X300	1999			KTM	✓	✓	✓
X300	1996			BPM	✓	✓	✓
X300	1996			IPK	✓	✓	✓
X300	1996			SEC	✓	✓	✓
X300	1996			CCM	✓	✓	✓
X300	1996			DSM	✓	✓	✓
X300	1996			CMM	✓	✓	✓
X300	1996			TCM	✓	✓	✓
X300	1996			ECM	✓	✓	✓
X300	1996			PSM	✓	✓	✓
X300	1996			ABS	✓	✓	✓
X300	1995			BPM	✓	✓	✓
X300	1995			IPK	✓	✓	✓
X300	1995			SEC	✓	✓	✓
X300	1995			CCM	✓	✓	✓
X300	1995			DSM	✓	✓	✓
X300	1995			CMM	✓	✓	✓
X300	1995			TCM	✓	✓	✓
X300	1995			ECM	✓	✓	✓
X300	1995			PSM	✓	✓	✓
X300	1995			ABS	✓	✓	✓
X300	1995 50			BPM	✓	✓	✓
X300	1995 50			IPK	✓	✓	✓
X300	1995 50			SEC	✓	✓	✓
X300	1995 50			CCM	✓	✓	✓
X300	1995 50			DSM	✓	✓	✓
X300	1995 50			CMM	✓	✓	✓
X300	1995 50			TCM	✓	✓	✓
X300	1995 50			ECM	✓	✓	✓
X300	1995 50			PSM	✓	✓	✓
X300	1995 50			ABS	✓	✓	✓
X300	1995 75			BPM	✓	✓	✓
X300	1995 75			IPK	✓	✓	✓
X300	1995 75			SEC	✓	✓	✓
X300	1995 75			CCM	✓	✓	✓
X300	1995 75			DSM	✓	✓	✓
X300	1995 75			CMM	✓	✓	✓
X300	1995 75			TCM	✓	✓	✓
X300	1995 75			ECM	✓	✓	✓
X300	1995 75			PSM	✓	✓	✓
X300	1995 75			ABS	✓	✓	✓
X300	1997			BPM	✓	✓	✓
X300	1997			IPK	✓	✓	✓
X300	1997			SEC	✓	✓	✓
X300	1997			CCM	✓	✓	✓
X300	1997			DSM	✓	✓	✓
X300	1997			CMM	✓	✓	✓
X300	1997			TCM	✓	✓	✓
X300	1997			PSM	✓	✓	✓
X300	1997			ECM	✓	✓	✓
X300	1997			ABS	✓	✓	✓
X300	1998			ABS	✓	✓	✓
X300	1998			ECM	✓	✓	✓
X300	1998			IPK	✓	✓	✓
X300	1998			TCM	✓	✓	✓
X300	1998			DSM	✓	✓	✓
X300	1998			PSM	✓	✓	✓
X300	1998			SLM	✓	✓	✓
X300	1998			PRDM	✓	✓	✓
X300	1998			PDM	✓	✓	✓
X300	1998			DRDM	✓	✓	✓
X300	1998			DDM	✓	✓	✓
X300	1998			BPM	✓	✓	✓
X300	1998 25			ACM	✓	✓	✓
X300	1998 25			CCM	✓	✓	✓
X300	1998 25			ADS	✓	✓	✓
X300	1998 25			KTM	✓	✓	✓
X300	1998 25			ECM	✓	✓	✓
X300	1998 25			IPK	✓	✓	✓
X300	1998 25			TCM	✓	✓	✓
X300	1998 25			DSM	✓	✓	✓
X300	1998 25			PSM	✓	✓	✓
X300	1998 25			SLM	✓	✓	✓
X300	1998 25			PRDM	✓	✓	✓
X300	1998 25			PDM	✓	✓	✓
X300	1998 25			DRDM	✓	✓	✓
X300	1998 25			DDM	✓	✓	✓
X300	1998 25			BPM	✓	✓	✓
X300	1998 25			ACM	✓	✓	✓
X300	1998 25			CCM	✓	✓	✓
X300	1998 25			ADS	✓	✓	✓
X300	1998 25			KTM	✓	✓	✓
X300	2001			ABS	✓	✓	✓
X300	2001			ECM	✓	✓	✓
X300	2001			IPK	✓	✓	✓
X300	2001			TCM	✓	✓	✓
X300	2001			DSM	✓	✓	✓
X300	2001			PSM	✓	✓	✓
X300	2001			SLM	✓	✓	✓
X300	2001			PRDM	✓	✓	✓
X300	2001			PDM	✓	✓	✓
X300	2001			DRDM	✓	✓	✓
X300	2001			DDM	✓	✓	✓

X300	2001			BPM	✓	✓	✓
X300	2001			ACM	✓	✓	✓
X300	2001			CCM	✓	✓	✓
X300	2001			ADS	✓	✓	✓
X300	2001			KTM	✓	✓	✓
X300H	1996			BPM	✓	✓	✓
X300H	1996			TPK	✓	✓	✓
X300H	1996			SEC	✓	✓	✓
X300H	1996			CCM	✓	✓	✓
X300H	1996			DSM	✓	✓	✓
X300H	1996			CMM	✓	✓	✓
X300H	1996			TCM	✓	✓	✓
X300H	1996			ECM	✓	✓	✓
X300H	1996			PSM	✓	✓	✓
X300H	1996			ABS	✓	✓	✓
X350	2002.5			ABS	✓	✓	✓
X350	2002.5			ACC	✓	✓	✓
X350	2002.5			ADHLS L	✓	✓	✓
X350	2002.5			ADHLS R	✓	✓	✓
X350	2002.5			AMP	✓	✓	✓
X350	2002.5			ARM	✓	✓	✓
X350	2002.5			ASU	✓	✓	✓
X350	2002.5			ATC	✓	✓	✓
X350	2002.5			CPM	✓	✓	✓
X350	2002.5			DDM	✓	✓	✓
X350	2002.5			DSM	✓	✓	✓
X350	2002.5			ECM	✓	✓	✓
X350	2002.5			EPB	✓	✓	✓
X350	2002.5			FETM	✓	✓	✓
X350	2002.5			GEM	✓	✓	✓
X350	2002.5			JP	✓	✓	✓
X350	2002.5			JSM	✓	✓	✓
X350	2002.5			NAV	✓	✓	✓
X350	2002.5			PAM	✓	✓	✓
X350	2002.5			RATC	✓	✓	✓
X350	2002.5			REM	✓	✓	✓
X350	2002.5			RETM	✓	✓	✓
X350	2002.5			RSM	✓	✓	✓
X350	2002.5			SCLM	✓	✓	✓
X350	2002.5			TCM	✓	✓	✓
X350	2002.5			VACM	✓	✓	✓
X351	2013			ABS	✓	✓	✓
X351	2013			BCM	✓	✓	✓
X351	2013			CCM	✓	✓	✓
X351	2013			CHCM	✓	✓	✓
X351	2013			GSM	✓	✓	✓
X351	2013			GWM	✓	✓	✓
X351	2013			HCM	✓	✓	✓
X351	2013			JPC	✓	✓	✓
X351	2013			OCS	✓	✓	✓
X351	2013			PBM	✓	✓	✓
X351	2013			PCM	✓	✓	✓
X351	2013			RCM	✓	✓	✓
X351	2013			RDCM	✓	✓	✓
X351	2013			RLM	✓	✓	✓
X351	2013			SPMA	✓	✓	✓
X351	2013			SPMB	✓	✓	✓
X351	2013			SLMB	✓	✓	✓
X351	2013			TCCM	✓	✓	✓
X351	2013			TCM	✓	✓	✓
X351	2013			VIM	✓	✓	✓
X351	2013			CAV	✓	✓	✓
X351	2013			DDM	✓	✓	✓
X351	2013			DSM	✓	✓	✓
X351	2013			FCDIM	✓	✓	✓
X351	2013			FCIMB	✓	✓	✓
X351	2013			HCMB	✓	✓	✓
X351	2013			HVAC	✓	✓	✓
X351	2013			PAM	✓	✓	✓
X351	2013			PDM	✓	✓	✓
X351	2013			PSM	✓	✓	✓
X351	2013			RFA	✓	✓	✓
X351	2013			RGTM	✓	✓	✓
X351	2013			RHVAC	✓	✓	✓
X351	2013			RLSM	✓	✓	✓
X351	2013			RISM	✓	✓	✓
X351	2013			SCME	✓	✓	✓
X351	2013			SCMP	✓	✓	✓
X351	2013			SODL	✓	✓	✓
X351	2013			SODR	✓	✓	✓
X351	2013			AAM	✓	✓	✓
X351	2013			ACM	✓	✓	✓
X351	2013			DABM	✓	✓	✓
X351	2013			NCM	✓	✓	✓
X351	2013			RFM	✓	✓	✓
X351	2013			SRM	✓	✓	✓
X351	2013			TVM	✓	✓	✓
X351	2010-2012	V6DIESEL		AAM	✓	✓	✓
X351	2010-2012	V6DIESEL		ABS	✓	✓	✓
X351	2010-2012	V6DIESEL		ACM	✓	✓	✓
X351	2010-2012	V6DIESEL		ADCM	✓	✓	✓
X351	2010-2012	V6DIESEL		BCM	✓	✓	✓
X351	2010-2012	V6DIESEL		CCM	✓	✓	✓
X351	2010-2012	V6DIESEL		CHCM	✓	✓	✓
X351	2010-2012	V6DIESEL		DABM	✓	✓	✓

X351	2010-2012	V6DIESEL		DCSM	✓	✓	✓
X351	2010-2012	V6DIESEL		DDM	✓	✓	✓
X351	2010-2012	V6DIESEL		DSM	✓	✓	✓
X351	2010-2012	V6DIESEL		FCDLM	✓	✓	✓
X351	2010-2012	V6DIESEL		ECTMB	✓	✓	✓
X351	2010-2012	V6DIESEL		GSM	✓	✓	✓
X351	2010-2012	V6DIESEL		HCM	✓	✓	✓
X351	2010-2012	V6DIESEL		HVAC	✓	✓	✓
X351	2010-2012	V6DIESEL		IPC	✓	✓	✓
X351	2010-2012	V6DIESEL		KYM	✓	✓	✓
X351	2010-2012	V6DIESEL		OCS	✓	✓	✓
X351	2010-2012	V6DIESEL		PAM	✓	✓	✓
X351	2010-2012	V6DIESEL		PBM	✓	✓	✓
X351	2010-2012	V6DIESEL		PCM	✓	✓	✓
X351	2010-2012	V6DIESEL		PDM	✓	✓	✓
X351	2010-2012	V6DIESEL		PSM	✓	✓	✓
X351	2010-2012	V6DIESEL		RCM	✓	✓	✓
X351	2010-2012	V6DIESEL		RDCM	✓	✓	✓
X351	2010-2012	V6DIESEL		RDCSM	✓	✓	✓
X351	2010-2012	V6DIESEL		RFM	✓	✓	✓
X351	2010-2012	V6DIESEL		RGTM	✓	✓	✓
X351	2010-2012	V6DIESEL		RHVAC	✓	✓	✓
X351	2010-2012	V6DIESEL		RLM	✓	✓	✓
X351	2010-2012	V6DIESEL		SODL	✓	✓	✓
X351	2010-2012	V6DIESEL		SODR	✓	✓	✓
X351	2010-2012	V6DIESEL		SPMA	✓	✓	✓
X351	2010-2012	V6DIESEL		SPMB	✓	✓	✓
X351	2010-2012	V6DIESEL		SRM	✓	✓	✓
X351	2010-2012	V6DIESEL		TCM	✓	✓	✓
X351	2010-2012	V6DIESEL		TYM	✓	✓	✓
X351	2010-2012	V6DIESEL		VTM	✓	✓	✓
X351	2010-2012	V8NA		AAM	✓	✓	✓
X351	2010-2012	V8NA		ABS	✓	✓	✓
X351	2010-2012	V8NA		ACM	✓	✓	✓
X351	2010-2012	V8NA		ADCM	✓	✓	✓
X351	2010-2012	V8NA		BCM	✓	✓	✓
X351	2010-2012	V8NA		CCM	✓	✓	✓
X351	2010-2012	V8NA		CHCM	✓	✓	✓
X351	2010-2012	V8NA		DABM	✓	✓	✓
X351	2010-2012	V8NA		DCSM	✓	✓	✓
X351	2010-2012	V8NA		DDM	✓	✓	✓
X351	2010-2012	V8NA		DSM	✓	✓	✓
X351	2010-2012	V8NA		FCDLM	✓	✓	✓
X351	2010-2012	V8NA		ECTMB	✓	✓	✓
X351	2010-2012	V8NA		GSM	✓	✓	✓
X351	2010-2012	V8NA		HCMB	✓	✓	✓
X351	2010-2012	V8NA		HCM	✓	✓	✓
X351	2010-2012	V8NA		HVAC	✓	✓	✓
X351	2010-2012	V8NA		IPC	✓	✓	✓
X351	2010-2012	V8NA		KYM	✓	✓	✓
X351	2010-2012	V8NA		OCS	✓	✓	✓
X351	2010-2012	V8NA		PAM	✓	✓	✓
X351	2010-2012	V8NA		PBM	✓	✓	✓
X351	2010-2012	V8NA		PCM	✓	✓	✓
X351	2010-2012	V8NA		PDM	✓	✓	✓
X351	2010-2012	V8NA		PSM	✓	✓	✓
X351	2010-2012	V8NA		RCM	✓	✓	✓
X351	2010-2012	V8NA		RDCM	✓	✓	✓
X351	2010-2012	V8NA		RDCSM	✓	✓	✓
X351	2010-2012	V8NA		RFM	✓	✓	✓
X351	2010-2012	V8NA		RGTM	✓	✓	✓
X351	2010-2012	V8NA		RHVAC	✓	✓	✓
X351	2010-2012	V8NA		RLM	✓	✓	✓
X351	2010-2012	V8NA		SODL	✓	✓	✓
X351	2010-2012	V8NA		SODR	✓	✓	✓
X351	2010-2012	V8NA		SPMA	✓	✓	✓
X351	2010-2012	V8NA		SPMB	✓	✓	✓
X351	2010-2012	V8NA		SRM	✓	✓	✓
X351	2010-2012	V8NA		TCM	✓	✓	✓
X351	2010-2012	V8NA		TYM	✓	✓	✓
X351	2010-2012	V8NA		VTM	✓	✓	✓
X351	2010-2012	V8SC		AAM	✓	✓	✓
X351	2010-2012	V8SC		ABS	✓	✓	✓
X351	2010-2012	V8SC		ACM	✓	✓	✓
X351	2010-2012	V8SC		ADCM	✓	✓	✓
X351	2010-2012	V8SC		BCM	✓	✓	✓
X351	2010-2012	V8SC		CCM	✓	✓	✓
X351	2010-2012	V8SC		CHCM	✓	✓	✓
X351	2010-2012	V8SC		DABM	✓	✓	✓
X351	2010-2012	V8SC		DCSM	✓	✓	✓
X351	2010-2012	V8SC		DDM	✓	✓	✓
X351	2010-2012	V8SC		DSM	✓	✓	✓
X351	2010-2012	V8SC		FCDLM	✓	✓	✓
X351	2010-2012	V8SC		ECTMB	✓	✓	✓
X351	2010-2012	V8SC		GSM	✓	✓	✓
X351	2010-2012	V8SC		HCMB	✓	✓	✓
X351	2010-2012	V8SC		HCM	✓	✓	✓
X351	2010-2012	V8SC		HVAC	✓	✓	✓
X351	2010-2012	V8SC		IPC	✓	✓	✓
X351	2010-2012	V8SC		KYM	✓	✓	✓
X351	2010-2012	V8SC		OCS	✓	✓	✓
X351	2010-2012	V8SC		PAM	✓	✓	✓
X351	2010-2012	V8SC		PBM	✓	✓	✓
X351	2010-2012	V8SC		PCM	✓	✓	✓
X351	2010-2012	V8SC		PDM	✓	✓	✓

X351	2010-2012	V8SC		PSM	✓	✓	✓
X351	2010-2012	V8SC		RCM	✓	✓	✓
X351	2010-2012	V8SC		RDCM	✓	✓	✓
X351	2010-2012	V8SC		RDCSM	✓	✓	✓
X351	2010-2012	V8SC		REM	✓	✓	✓
X351	2010-2012	V8SC		RGTM	✓	✓	✓
X351	2010-2012	V8SC		RHVAC	✓	✓	✓
X351	2010-2012	V8SC		RLM	✓	✓	✓
X351	2010-2012	V8SC		SODL	✓	✓	✓
X351	2010-2012	V8SC		SODR	✓	✓	✓
X351	2010-2012	V8SC		SPMA	✓	✓	✓
X351	2010-2012	V8SC		SPMB	✓	✓	✓
X351	2010-2012	V8SC		SRM	✓	✓	✓
X351	2010-2012	V8SC		TCM	✓	✓	✓
X351	2010-2012	V8SC		TYM	✓	✓	✓
X351	2010-2012	V8SC		VTM	✓	✓	✓
X356	2006	V6DIESEL		AHCM	✓	✓	✓
X356	2006	V6DIESEL		ABS	✓	✓	✓
X356	2006	V6DIESEL		ACC	✓	✓	✓
X356	2006	V6DIESEL		AMP	✓	✓	✓
X356	2006	V6DIESEL		ARM	✓	✓	✓
X356	2006	V6DIESEL		ASU	✓	✓	✓
X356	2006	V6DIESEL		ATC	✓	✓	✓
X356	2006	V6DIESEL		CPM	✓	✓	✓
X356	2006	V6DIESEL		DDM	✓	✓	✓
X356	2006	V6DIESEL		DSM	✓	✓	✓
X356	2006	V6DIESEL		EETM	✓	✓	✓
X356	2006	V6DIESEL		GFM	✓	✓	✓
X356	2006	V6DIESEL		IP	✓	✓	✓
X356	2006	V6DIESEL		ISM	✓	✓	✓
X356	2006	V6DIESEL		NAV	✓	✓	✓
X356	2006	V6DIESEL		PAM	✓	✓	✓
X356	2006	V6DIESEL		PBM	✓	✓	✓
X356	2006	V6DIESEL		PCM	✓	✓	✓
X356	2006	V6DIESEL		RATC	✓	✓	✓
X356	2006	V6DIESEL		REM	✓	✓	✓
X356	2006	V6DIESEL		RETM	✓	✓	✓
X356	2006	V6DIESEL		RSM	✓	✓	✓
X356	2006	V6DIESEL		SCLM	✓	✓	✓
X356	2006	V6DIESEL		TCM	✓	✓	✓
X356	2006	V6DIESEL		TPM	✓	✓	✓
X356	2006	V6DIESEL		VACM	✓	✓	✓
X356	2006	V6NA		ABS	✓	✓	✓
X356	2006	V6NA		ACC	✓	✓	✓
X356	2006	V6NA		AMP	✓	✓	✓
X356	2006	V6NA		ARM	✓	✓	✓
X356	2006	V6NA		ASU	✓	✓	✓
X356	2006	V6NA		ATC	✓	✓	✓
X356	2006	V6NA		CPM	✓	✓	✓
X356	2006	V6NA		DDM	✓	✓	✓
X356	2006	V6NA		DSM	✓	✓	✓
X356	2006	V6NA		EETM	✓	✓	✓
X356	2006	V6NA		GFM	✓	✓	✓
X356	2006	V6NA		IP	✓	✓	✓
X356	2006	V6NA		ISM	✓	✓	✓
X356	2006	V6NA		NAV	✓	✓	✓
X356	2006	V6NA		PAM	✓	✓	✓
X356	2006	V6NA		PBM	✓	✓	✓
X356	2006	V6NA		PCM	✓	✓	✓
X356	2006	V6NA		RATC	✓	✓	✓
X356	2006	V6NA		REM	✓	✓	✓
X356	2006	V6NA		RETM	✓	✓	✓
X356	2006	V6NA		RSM	✓	✓	✓
X356	2006	V6NA		SCLM	✓	✓	✓
X356	2006	V6NA		TCM	✓	✓	✓
X356	2006	V6NA		TPM	✓	✓	✓
X356	2006	V6NA		VACM	✓	✓	✓
X356	2006	V8NA		ABS	✓	✓	✓
X356	2006	V8NA		ACC	✓	✓	✓
X356	2006	V8NA		AMP	✓	✓	✓
X356	2006	V8NA		ARM	✓	✓	✓
X356	2006	V8NA		ASU	✓	✓	✓
X356	2006	V8NA		ATC	✓	✓	✓
X356	2006	V8NA		CPM	✓	✓	✓
X356	2006	V8NA		DDM	✓	✓	✓
X356	2006	V8NA		DSM	✓	✓	✓
X356	2006	V8NA		EETM	✓	✓	✓
X356	2006	V8NA		GFM	✓	✓	✓
X356	2006	V8NA		IP	✓	✓	✓
X356	2006	V8NA		ISM	✓	✓	✓
X356	2006	V8NA		NAV	✓	✓	✓
X356	2006	V8NA		PAM	✓	✓	✓
X356	2006	V8NA		PBM	✓	✓	✓
X356	2006	V8NA		PCM	✓	✓	✓
X356	2006	V8NA		RATC	✓	✓	✓
X356	2006	V8NA		REM	✓	✓	✓
X356	2006	V8NA		RETM	✓	✓	✓
X356	2006	V8NA		RSM	✓	✓	✓
X356	2006	V8NA		SCLM	✓	✓	✓
X356	2006	V8NA		TCM	✓	✓	✓
X356	2006	V8NA		TPM	✓	✓	✓
X356	2006	V8NA		VACM	✓	✓	✓
X356	2006	V8SC		ABS	✓	✓	✓
X356	2006	V8SC		ACC	✓	✓	✓
X356	2006	V8SC		AMP	✓	✓	✓

X356	2006	V8SC		ARM	✓	✓	✓
X356	2006	V8SC		ASU	✓	✓	✓
X356	2006	V8SC		ATC	✓	✓	✓
X356	2006	V8SC		CPM	✓	✓	✓
X356	2006	V8SC		DDM	✓	✓	✓
X356	2006	V8SC		DSM	✓	✓	✓
X356	2006	V8SC		EFTM	✓	✓	✓
X356	2006	V8SC		GEM	✓	✓	✓
X356	2006	V8SC		IP	✓	✓	✓
X356	2006	V8SC		ISM	✓	✓	✓
X356	2006	V8SC		NAV	✓	✓	✓
X356	2006	V8SC		PAM	✓	✓	✓
X356	2006	V8SC		PBM	✓	✓	✓
X356	2006	V8SC		PCM	✓	✓	✓
X356	2006	V8SC		RATC	✓	✓	✓
X356	2006	V8SC		REM	✓	✓	✓
X356	2006	V8SC		RETM	✓	✓	✓
X356	2006	V8SC		RSM	✓	✓	✓
X356	2006	V8SC		SCLM	✓	✓	✓
X356	2006	V8SC		TCM	✓	✓	✓
X356	2006	V8SC		TPM	✓	✓	✓
X356	2006	V8SC		VACM	✓	✓	✓
X358	2008	V6DIESEL		AHCM	✓	✓	✓
X358	2008	V6DIESEL		ABS	✓	✓	✓
X358	2008	V6DIESEL		ACC	✓	✓	✓
X358	2008	V6DIESEL		AMP	✓	✓	✓
X358	2008	V6DIESEL		ARM	✓	✓	✓
X358	2008	V6DIESEL		ASU	✓	✓	✓
X358	2008	V6DIESEL		ATC	✓	✓	✓
X358	2008	V6DIESEL		CPM	✓	✓	✓
X358	2008	V6DIESEL		DABM	✓	✓	✓
X358	2008	V6DIESEL		DACMC	✓	✓	✓
X358	2008	V6DIESEL		DCSM	✓	✓	✓
X358	2008	V6DIESEL		DDM	✓	✓	✓
X358	2008	V6DIESEL		DSM	✓	✓	✓
X358	2008	V6DIESEL		EFTM	✓	✓	✓
X358	2008	V6DIESEL		GEM	✓	✓	✓
X358	2008	V6DIESEL		GWM	✓	✓	✓
X358	2008	V6DIESEL		IP	✓	✓	✓
X358	2008	V6DIESEL		ISM	✓	✓	✓
X358	2008	V6DIESEL		NAV	✓	✓	✓
X358	2008	V6DIESEL		PAM	✓	✓	✓
X358	2008	V6DIESEL		PBM	✓	✓	✓
X358	2008	V6DIESEL		PCM	✓	✓	✓
X358	2008	V6DIESEL		RATC	✓	✓	✓
X358	2008	V6DIESEL		REM	✓	✓	✓
X358	2008	V6DIESEL		RETM	✓	✓	✓
X358	2008	V6DIESEL		RSM	✓	✓	✓
X358	2008	V6DIESEL		SCLM	✓	✓	✓
X358	2008	V6DIESEL		SRM	✓	✓	✓
X358	2008	V6DIESEL		TCM	✓	✓	✓
X358	2008	V6DIESEL		TPM	✓	✓	✓
X358	2008	V6DIESEL		VACM	✓	✓	✓
X358	2008	V6NA		ABS	✓	✓	✓
X358	2008	V6NA		ACC	✓	✓	✓
X358	2008	V6NA		AMP	✓	✓	✓
X358	2008	V6NA		ARM	✓	✓	✓
X358	2008	V6NA		ASU	✓	✓	✓
X358	2008	V6NA		ATC	✓	✓	✓
X358	2008	V6NA		CPM	✓	✓	✓
X358	2008	V6NA		DABM	✓	✓	✓
X358	2008	V6NA		DACMC	✓	✓	✓
X358	2008	V6NA		DCSM	✓	✓	✓
X358	2008	V6NA		DDM	✓	✓	✓
X358	2008	V6NA		DSM	✓	✓	✓
X358	2008	V6NA		EFTM	✓	✓	✓
X358	2008	V6NA		GEM	✓	✓	✓
X358	2008	V6NA		GWM	✓	✓	✓
X358	2008	V6NA		IP	✓	✓	✓
X358	2008	V6NA		ISM	✓	✓	✓
X358	2008	V6NA		NAV	✓	✓	✓
X358	2008	V6NA		PAM	✓	✓	✓
X358	2008	V6NA		PBM	✓	✓	✓
X358	2008	V6NA		PCM	✓	✓	✓
X358	2008	V6NA		RATC	✓	✓	✓
X358	2008	V6NA		REM	✓	✓	✓
X358	2008	V6NA		RETM	✓	✓	✓
X358	2008	V6NA		RSM	✓	✓	✓
X358	2008	V6NA		SCLM	✓	✓	✓
X358	2008	V6NA		SRM	✓	✓	✓
X358	2008	V6NA		TCM	✓	✓	✓
X358	2008	V6NA		TPM	✓	✓	✓
X358	2008	V6NA		VACM	✓	✓	✓
X358	2008	V8NA		ABS	✓	✓	✓
X358	2008	V8NA		ACC	✓	✓	✓
X358	2008	V8NA		AMP	✓	✓	✓
X358	2008	V8NA		ARM	✓	✓	✓
X358	2008	V8NA		ASU	✓	✓	✓
X358	2008	V8NA		ATC	✓	✓	✓
X358	2008	V8NA		CPM	✓	✓	✓
X358	2008	V8NA		DABM	✓	✓	✓
X358	2008	V8NA		DACMC	✓	✓	✓
X358	2008	V8NA		DCSM	✓	✓	✓
X358	2008	V8NA		DDM	✓	✓	✓
X358	2008	V8NA		DSM	✓	✓	✓



X358	2008	V8NA		FETM	✓	✓	✓
X358	2008	V8NA		GEM	✓	✓	✓
X358	2008	V8NA		GWM	✓	✓	✓
X358	2008	V8NA		IP	✓	✓	✓
X358	2008	V8NA		ISM	✓	✓	✓
X358	2008	V8NA		NAV	✓	✓	✓
X358	2008	V8NA		PAM	✓	✓	✓
X358	2008	V8NA		PBM	✓	✓	✓
X358	2008	V8NA		PCM	✓	✓	✓
X358	2008	V8NA		RATC	✓	✓	✓
X358	2008	V8NA		REM	✓	✓	✓
X358	2008	V8NA		RETM	✓	✓	✓
X358	2008	V8NA		RSM	✓	✓	✓
X358	2008	V8NA		SCLM	✓	✓	✓
X358	2008	V8NA		SRM	✓	✓	✓
X358	2008	V8NA		TCM	✓	✓	✓
X358	2008	V8NA		TPM	✓	✓	✓
X358	2008	V8NA		VACM	✓	✓	✓
X358	2008	V8SC		ABS	✓	✓	✓
X358	2008	V8SC		ACC	✓	✓	✓
X358	2008	V8SC		AMP	✓	✓	✓
X358	2008	V8SC		ARM	✓	✓	✓
X358	2008	V8SC		ASU	✓	✓	✓
X358	2008	V8SC		ATC	✓	✓	✓
X358	2008	V8SC		CPM	✓	✓	✓
X358	2008	V8SC		DABM	✓	✓	✓
X358	2008	V8SC		DACMC	✓	✓	✓
X358	2008	V8SC		DCSM	✓	✓	✓
X358	2008	V8SC		DDM	✓	✓	✓
X358	2008	V8SC		DSM	✓	✓	✓
X358	2008	V8SC		FETM	✓	✓	✓
X358	2008	V8SC		GEM	✓	✓	✓
X358	2008	V8SC		GWM	✓	✓	✓
X358	2008	V8SC		IP	✓	✓	✓
X358	2008	V8SC		ISM	✓	✓	✓
X358	2008	V8SC		NAV	✓	✓	✓
X358	2008	V8SC		PAM	✓	✓	✓
X358	2008	V8SC		PBM	✓	✓	✓
X358	2008	V8SC		PCM	✓	✓	✓
X358	2008	V8SC		RATC	✓	✓	✓
X358	2008	V8SC		REM	✓	✓	✓
X358	2008	V8SC		RETM	✓	✓	✓
X358	2008	V8SC		RSM	✓	✓	✓
X358	2008	V8SC		SCLM	✓	✓	✓
X358	2008	V8SC		SRM	✓	✓	✓
X358	2008	V8SC		TCM	✓	✓	✓
X358	2008	V8SC		TPM	✓	✓	✓
X358	2008	V8SC		VACM	✓	✓	✓
X400	2001 50			ABS	✓	✓	✓
X400	2001 50			ECM	✓	✓	✓
X400	2001 50			IP	✓	✓	✓
X400	2001 50			TCM	✓	✓	✓
X400	2001 50			ATC	✓	✓	✓
X400	2001 50			PAM	✓	✓	✓
X400	2001 50			ISM	✓	✓	✓
X400	2001 50			ARM	✓	✓	✓
X400	2001 50			ADHLS	✓	✓	✓
X400	2001 50			FETM	✓	✓	✓
X400	2001 50			GEM	✓	✓	✓
X400	2001 50			NAV	✓	✓	✓
X400	2001 50			CPM	✓	✓	✓
X400	2001 50			VACM	✓	✓	✓
X404	2004	AT61		ABS	✓	✓	✓
X404	2004	AT61		ADHLS	✓	✓	✓
X404	2004	AT61		AMP	✓	✓	✓
X404	2004	AT61		ARM	✓	✓	✓
X404	2004	AT61		ATC	✓	✓	✓
X404	2004	AT61		CPM	✓	✓	✓
X404	2004	AT61		DSM	✓	✓	✓
X404	2004	AT61		ECM	✓	✓	✓
X404	2004	AT61		FETM	✓	✓	✓
X404	2004	AT61		GEM	✓	✓	✓
X404	2004	AT61		IP	✓	✓	✓
X404	2004	AT61		ISM	✓	✓	✓
X404	2004	AT61		NAV	✓	✓	✓
X404	2004	AT61		PAM	✓	✓	✓
X404	2004	AT61		TCM	✓	✓	✓
X404	2004	AT61		TPM	✓	✓	✓
X404	2004	AT61		VACM	✓	✓	✓
X404	2004	TDCi	2, 2L	ABS	✓	✓	✓
X404	2004	TDCi	2, 2L	ADHLS	✓	✓	✓
X404	2004	TDCi	2, 2L	AMP	✓	✓	✓
X404	2004	TDCi	2, 2L	ARM	✓	✓	✓
X404	2004	TDCi	2, 2L	ATC	✓	✓	✓
X404	2004	TDCi	2, 2L	CPM	✓	✓	✓
X404	2004	TDCi	2, 2L	DSM	✓	✓	✓
X404	2004	TDCi	2, 2L	FETM	✓	✓	✓
X404	2004	TDCi	2, 2L	GEM	✓	✓	✓
X404	2004	TDCi	2, 2L	IP	✓	✓	✓
X404	2004	TDCi	2, 2L	ISM	✓	✓	✓
X404	2004	TDCi	2, 2L	NAV	✓	✓	✓
X404	2004	TDCi	2, 2L	PAM	✓	✓	✓
X404	2004	TDCi	2, 2L	TPM	✓	✓	✓
X404	2004	TDCi	2, 2L	VACM	✓	✓	✓
X404	2004	TDCi	2, 2L	ECM	✓	✓	✓

X404	2004	TDCi	2L 2L	FFH	✓	✓	✓
X404	2004	TDCi	2L 2L	GWM	✓	✓	✓
X404	2004	TDCi	2L 2L	TCM	✓	✓	✓
X404	2004	TDCi	2L	ABS	✓	✓	✓
X404	2004	TDCi	2L	ADHLS	✓	✓	✓
X404	2004	TDCi	2L	AMP	✓	✓	✓
X404	2004	TDCi	2L	ARM	✓	✓	✓
X404	2004	TDCi	2L	ATC	✓	✓	✓
X404	2004	TDCi	2L	CPM	✓	✓	✓
X404	2004	TDCi	2L	DSM	✓	✓	✓
X404	2004	TDCi	2L	EETM	✓	✓	✓
X404	2004	TDCi	2L	GEM	✓	✓	✓
X404	2004	TDCi	2L	JP	✓	✓	✓
X404	2004	TDCi	2L	JSM	✓	✓	✓
X404	2004	TDCi	2L	NAV	✓	✓	✓
X404	2004	TDCi	2L	PAM	✓	✓	✓
X404	2004	TDCi	2L	TPM	✓	✓	✓
X404	2004	TDCi	2L	VACM	✓	✓	✓
X404	2004	TDCi	2L	ECM	✓	✓	✓
X404	2004	TDCi	2L	FFH	✓	✓	✓
XIS	1996			CCM	✓	✓	✓
XIS	1996			SEC	✓	✓	✓
XIS	1996			DSM	✓	✓	✓
XIS	1996			TCM	✓	✓	✓
XIS	1996			ECM	✓	✓	✓
XIS	1996			ABS	✓	✓	✓
XIS	1994 75			CCM	✓	✓	✓
XIS	1994 75			SEC	✓	✓	✓
XIS	1994 75			DSM	✓	✓	✓
XIS	1994 75			TCM	✓	✓	✓
XIS	1994 75			ECM	✓	✓	✓
XIS	1994 75			ABS	✓	✓	✓
XIS	1995 25			CCM	✓	✓	✓
XIS	1995 25			SEC	✓	✓	✓
XIS	1995 25			DSM	✓	✓	✓
XIS	1995 25			TCM	✓	✓	✓
XIS	1995 25			ECM	✓	✓	✓
XIS	1995 25			ABS	✓	✓	✓

# Special Function

Vehicle Type	Model Year	Special Function Name
X150	2006. 5-2009	Driver's door window glass
X150	2006. 5-2009	Erase all existing keys.
X150	2006. 5-2009	Headlamp and axle sensor calibration.
X150	2006. 5-2009	Pre-delivery inspection
X150	2006. 5-2009	Vehicle reset
X150	2006. 5-2009	Powertrain control module adaption clear
X150	2006. 5-2009	Transmission control module adaptation clear
X150	2006. 5-2009	Idle speed test.
X150	2006. 5-2009	Immobilization
X150	2006. 5-2009	Key programming
X150	2006. 5-2009	Lateral accelerometer calibration.
X150	2006. 5-2009	Parking brake release to service position
X150	2006. 5-2009	Passenger's door window glass
X150	2006. 5-2009	Pressure sensor calibration.
X150	2006. 5-2009	Seat cover replacement
X150	2006. 5-2009	Steering column calibration
X150	2006. 5-2009	Tire pressure monitor confirmation application.
X150	2006. 5-2009	Tire pressure monitor receiver calibration.
X150	2006. 5-2009	Tire pressure sensor replacement.
X150	2006. 5-2009	Verify keys
X150	2006. 5-2009	Yaw rate sensor calibration.
X150	2010	Battery replacement
X150	2010	Brake bleed.
X150	2010	Vehicle reset
X150	2010	Powertrain control module adaption clear
X150	2010	Transmission control module adaption clear
X150	2010	Build mode
X150	2010	Calibration learn
X150	2010	Check engine oil level.
X150	2010	Driver's side - Door glass window calibration
X150	2010	Erase all existing keys.
X150	2010	Headlamp and axle sensor calibration.
X150	2010	Height calibration
X150	2010	Idle speed test.
X150	2010	Immobilization
X150	2010	Key programming
X150	2010	Oil service counter reset
X150	2010	Parking brake release to service position
X150	2010	Passenger's side - Door glass window calibration
X150	2010	Reset oil level
X150	2010	Seat cover replacement
X150	2010	Steering column calibration
X150	2010	Tire pressure monitor confirmation application.
X150	2010	Tire pressure monitor receiver calibration.
X150	2010	Tire pressure monitor sensor identification display
X150	2010	Tire pressure sensor replacement.
X150	2010	Verify keys
X152	2014	Service interval reset.
X152	2014	Oil service counter reset
X152	2014	Parking brake pad replacement - Exit maintenance mode

X152	2014	Parking brake pad replacement – Release to service position
X152	2014	Parking brake activation
X152	2014	Brake bleed
X152	2014	Steering angle sensor calibration
X152	2014	Longitudinal accelerometer calibration
X152	2014	Headlamp control module system calibration
X152	2014	Drivers side window calibration
X152	2014	Passenger side window calibration
X152	2014	Steering column calibration
X152	2014	Tire pressure sensor replacement
X152	2014	Tire pressure monitor sensor identification display
X152	2014	Tire pressure monitoring wheel sensor test
X152	2014	Battery replacement
X152	2014	Verify battery 2 charging
X152	2014	Idle speed test
X152	2014	Throttle valve actuator replacement
X152	2014	Injector Valve Test
X202	2002. 5	Parking brake release to service position
X202	2002. 5	Reset the oil service counter.
X202	2002. 5	Tire pressure monitor confirmation application.
X202	2002. 5	Tire pressure monitor receiver calibration.
X202	2002. 5	Tire pressure sensor replacement.
X250	2008-2009	Air conditioning system adaption reset
X250	2008-2009	Battery replacement
X250	2008-2009	Headlamp control module system calibration
X250	2008-2009	Adaptive damping module calibration learn
X250	2008-2009	Powertrain control module adaption clear
X250	2008-2009	Transmission control module adaption clear
X250	2008-2009	Diesel particulate filter condition (stored values)
X250	2008-2009	Brake bleed.
X250	2008-2009	Diesel particulate filter dynamic regeneration
X250	2008-2009	Diesel particulate filter fuel related component replacement
X250	2008-2009	Diesel particulate filter replacement
X250	2008-2009	Driver's side – Door glass window calibration
X250	2008-2009	Erase all existing keys.
X250	2008-2009	Headlamp control module system calibration
X250	2008-2009	Idle speed test.
X250	2008-2009	Immobilization
X250	2008-2009	Key programming
X250	2008-2009	Parking brake release to service position
X250	2008-2009	Passenger's side – Door glass window calibration
X250	2008-2009	Pedestrian impact crash status reset
X250	2008-2009	Reset the oil service counter.
X250	2008-2009	Restraints build mode
X250	2008-2009	Seat cushion replacement
X250	2008-2009	Steering column calibration
X250	2008-2009	Tire pressure monitor confirmation application.
X250	2008-2009	Tire pressure monitor receiver calibration.
X250	2008-2009	Tire pressure sensor replacement.
X250	2008-2009	Verify keys
X250	2010-2011	Battery replacement
X250	2010-2011	Headlamp control module system calibration
X250	2010-2011	Powertrain control module adaption clear
X250	2010-2011	Transmission control module adaption clear

X250	2010-2011	Brake bleed.
X250	2010-2011	Build mode
X250	2010-2011	Calibration learn
X250	2010-2011	Check engine oil level.
X250	2010-2011	Diesel particulate filter dynamic regeneration
X250	2010-2011	Diesel particulate filter replacement
X250	2010-2011	Driver's side - Door glass window calibration
X250	2010-2011	Erase all existing keys.
X250	2010-2011	Exhaust gas recirculation valve
X250	2010-2011	Headlamp control module system calibration
X250	2010-2011	Height calibration
X250	2010-2011	Idle speed test.
X250	2010-2011	Immobilization
X250	2010-2011	Injector replacement
X250	2010-2011	Key programming
X250	2010-2011	Oil service counter reset
X250	2010-2011	Parking brake release to service position
X250	2010-2011	Passenger's side - Door glass window calibration
X250	2010-2011	Pedestrian impact crash status reset
X250	2010-2011	Reset oil level
X250	2010-2011	Restraints build mode
X250	2010-2011	Seat cushion replacement
X250	2010-2011	Steering column calibration
X250	2010-2011	Throttle valve actuator
X250	2010-2011	Tire pressure monitor confirmation application.
X250	2010-2011	Tire pressure monitor receiver calibration.
X250	2010-2011	Tire pressure sensor replacement.
X250	2010-2011	Verify keys
X250	2012	Oil service counter reset
X250	2012	Oil change reset
X250	2012	Parking brake release to service position
X250	2012	Seat cushion replacement
X250	2012	Brake bleed
X250	2012	Yaw rate sensor calibration
X250	2012	Drivers side window calibration
X250	2012	Passenger side window calibration
X250	2012	Steering column calibration
X250	2012	Tire pressure sensor replacement
X250	2012	Tire pressure monitor receiver calibration
X250	2012	Throttle valve actuator
X250	2012	Exhaust gas recirculation valve
X250	2012	Injector replacement
X250	2012	Diesel particulate filter differential pressure sensor replacement
X250	2012	Build mode
X250	2012	Calibration learn
X250	2012	Height calibration
X250	2012	Battery replacement
X250	2012	Idle speed test
X250	2012	Transmission control module adaption clear
X250	2012	Diesel particulate filter dynamic regeneration
X250	2012	Diesel particulate filter replacement
X250	2012	Check engine oil level
X250	2012	Display injector correction factors

X250	2012	Idle speed - Adjustment
X250	2012	Tire size (rolling circumference)
X250	2012	Reset oil level
X250	2012	ROW Service interval options
X250	2013	Parking brake release to service position
X250	2013	Seat cushion replacement
X250	2013	Brake bleed
X250	2013	Yaw rate sensor calibration
X250	2013	Drivers side window calibration
X250	2013	Passenger side window calibration
X250	2013	Steering column calibration
X250	2013	Tire pressure sensor replacement
X250	2013	Tire pressure monitor receiver calibration
X250	2013	Throttle valve actuator
X250	2013	Exhaust gas recirculation valve
X250	2013	Injector replacement
X250	2013	Diesel particulate filter differential pressure sensor replacement
X250	2013	DECM Fueling adaption re-initialization
X250	2013	Build mode
X250	2013	Calibration learn
X250	2013	Height calibration
X250	2013	Battery replacement
X250	2013	Idle speed test
X250	2013	Diesel particulate filter dynamic regeneration
X250	2013	Diesel particulate filter replacement
X250	2013	Display injector correction factors
X250	2013	Idle speed - Adjustment
X250	2013	Throttle valve actuator replacement
X250	2013	Injector Valve Test
X250	2013	Oil service counter reset
X250	2013	ROW Service interval options
X250	2013	Service interval reset.
X350	2002. 5	Parking brake release to service position
X350	2002. 5	Reset the oil service counter.
X350	2002. 5	Tire pressure monitor confirmation application.
X350	2002. 5	Tire pressure monitor receiver calibration.
X350	2002. 5	Tire pressure sensor replacement.
X351	2010-2012	Add additional keys
X351	2010-2012	Air suspension deflation.
X351	2010-2012	Headlamp control module system calibration
X351	2010-2012	Tire pressure sensor replacement
X351	2010-2012	Restraints build mode
X351	2010-2012	Vehicle reset
X351	2010-2012	Powertrain control module adaption clear
X351	2010-2012	Transmission control module adaption clear
X351	2010-2012	Air suspension enable.
X351	2010-2012	Battery replacement
X351	2010-2012	Brake bleed.
X351	2010-2012	Build mode
X351	2010-2012	Calibration learn
X351	2010-2012	Check Passive Keys Enabled
X351	2010-2012	Diesel particulate filter dynamic regeneration
X351	2010-2012	Diesel particulate filter replacement
X351	2010-2012	Driver's side - Door glass window calibration

X351	2010-2012	Exhaust gas recirculation valve
X351	2010-2012	Headlamp calibration suspension set-up
X351	2010-2012	Headlamp control module system calibration
X351	2010-2012	Idle speed test.
X351	2010-2012	Immobilization
X351	2010-2012	Injector replacement
X351	2010-2012	Oil service counter reset
X351	2010-2012	Parking brake release to service position
X351	2010-2012	Passenger's side - Door glass window calibration
X351	2010-2012	Recover Programmed keys
X351	2010-2012	Replace faulty/lost keys
X351	2010-2012	Seat cushion replacement
X351	2010-2012	Service interval reset.
X351	2010-2012	Steering column calibration
X351	2010-2012	Sunroof calibration
X351	2010-2012	Suspension geometry set-up
X351	2010-2012	Suspension tight tolerance control
X351	2010-2012	Throttle valve actuator
X351	2010-2012	Verify keys
X351	2013~2014	Seat cushion replacement
X351	2013~2014	Brake bleed
X351	2013~2014	Headlamp control module system calibration
X351	2013~2014	Drivers side window calibration
X351	2013~2014	Passenger side window calibration
X351	2013~2014	Steering column calibration
X351	2013~2014	Sunroof calibration
X351	2013~2014	Tire pressure sensor replacement
X351	2013~2014	Tire pressure monitor sensor identification display
X351	2013~2014	Throttle valve actuator
X351	2013~2014	Exhaust gas recirculation valve
X351	2013~2014	Injector replacement
X351	2013~2014	Restraints build mode
X351	2013~2014	Idle speed test
X351	2013~2014	Diesel particulate filter dynamic regeneration
X351	2013~2014	Diesel particulate filter replacement
X351	2013~2014	Throttle valve actuator replacement
X351	2013~2014	Injector Valve Test
X351	2013-2014	Service interval reset.
X351	2013-2014	Oil service counter reset
X351	2013-2014	Parking brake release to service position
X351	2013-2014	ROW Service interval options
X400	2001_50	Brake bleed.
X400	2001_50	Service interval reset.
X400	2001_50	Steering angle sensor calibration
X400	2001_50	Tire pressure monitor confirmation application.
X400	2001_50	Tire pressure monitor receiver calibration.
X400	2001_50	Tire pressure sensor replacement.